


CLUBMAN AND CLUBMAN G.T. WITH 15 OR 16 ACR ALTERNATOR

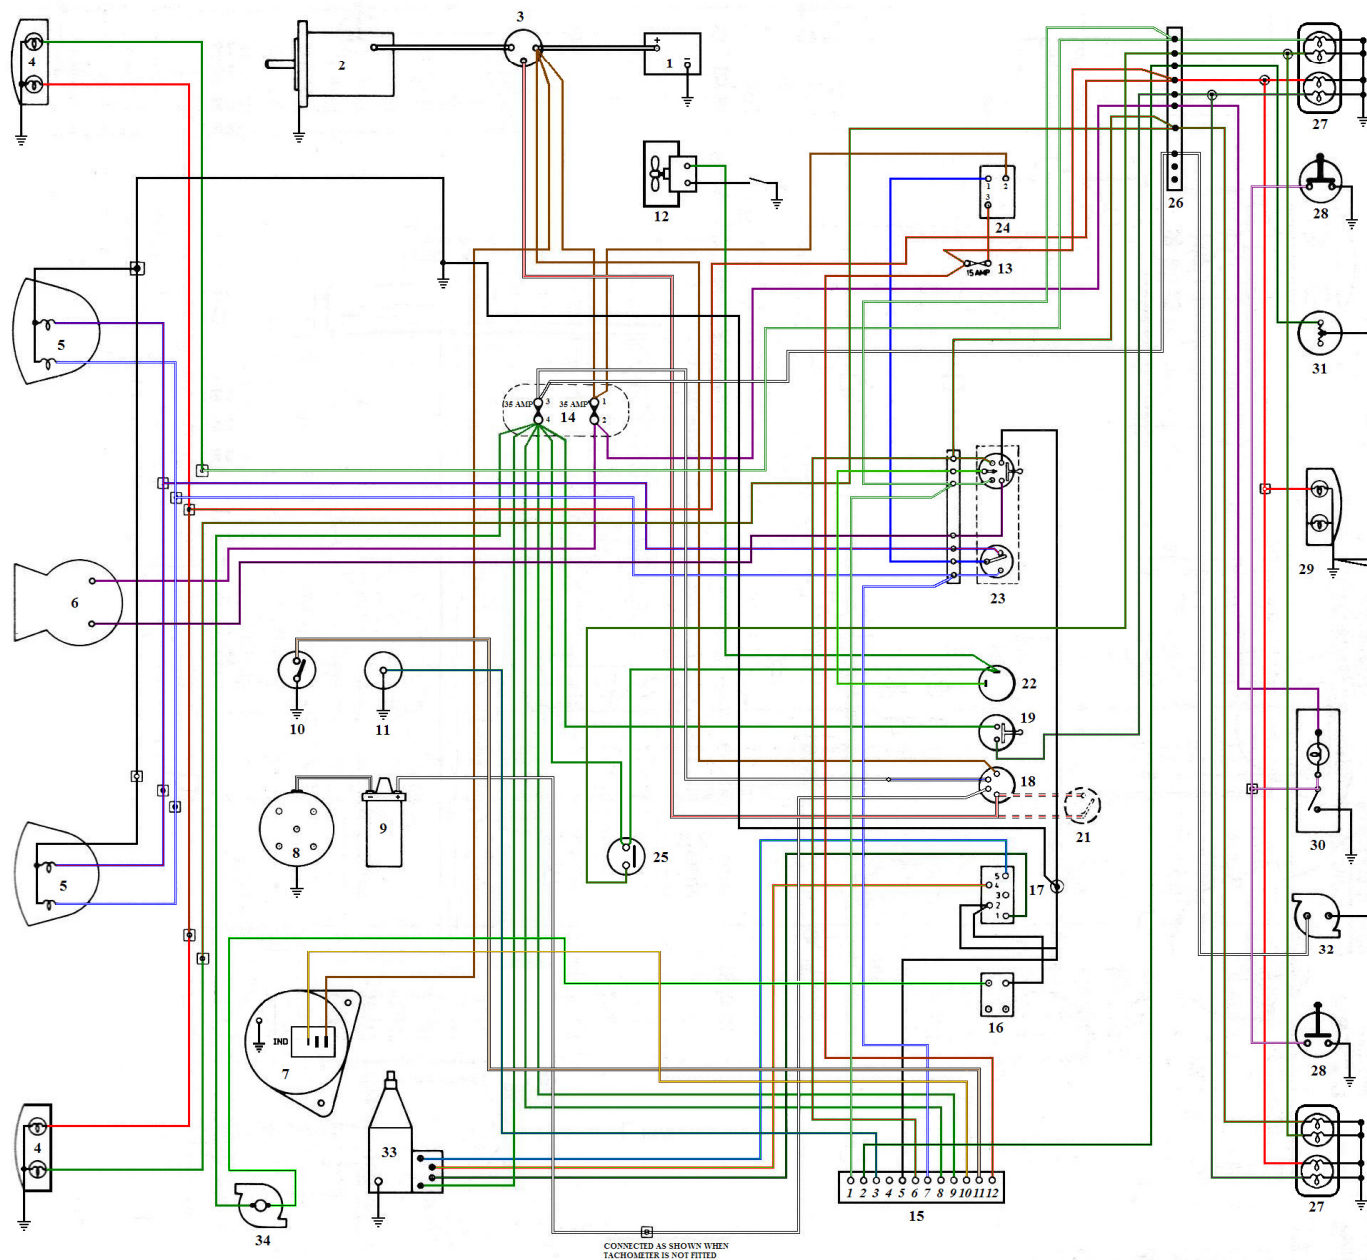

No.	UNIT
1	Battery
2	Starter Motor
3	Starter Solenoid
4	Sidelight/Indicator
5	Headlight
6	Horn
7	Alternator
8	Distributor
9	Ignition Coil
10	Oil Pressure Switch
11	Water Temp Sensor
12	Heater Motor
13	Line Fuse Sidelights
14	Fuse Box
15	Printed Circuit Plug
16	Washer Switch
17	Wiper Switch

No.	UNIT
18	Ignition Switch
19	Stop Light Switch
21	Inhibitor Switch
22	Flasher Unit
23	Indicator/dip Switch
24	Light Switch
25	Reverse Switch
26	Body Junction Plug
27	Stop/Tail/Flasher Light
28	Door Switch
29	Number Plate Light
30	Interior Light
31	Tank Sender Unit
32	Fuel Pump
33	Wiper Motor
34	Washer Motor

NOTES

Sidelight line fuse is usually situated in wiring loom on bulkhead behind master cylinders but is NOT present on all cars

Wire colours are prone to change at connectors. Known changes are shown here correctly.

Wiring Verified for 1973 to 1975 Clubman range. Other vehicles may have some small differences but are mainly the same.

Ign switch shown is 5 position steering lock type common to Clubmans

Drawn By David Whorwood
 D. & E. Whorwood Electrical
 dewhorwood@bigpond.com

CABLE COLOUR	KEY
— BLACK	B
— BLUE	U
— BROWN	N
— GREEN	G
— LIGHT GREEN	LT.G
— ORANGE	O
— PINK	K
— PURPLE	P
— RED	R
— SLATE	S
— WHITE	W
— YELLOW	Y